





236 Hightower Parkway  
 Dawsonville, GA 30534  
 Ph: 706.216.5545  
 Fax: 706.216.5550

**Native Custom Stone  
 Installation Illustration Guide**

**Masonry or Concrete**

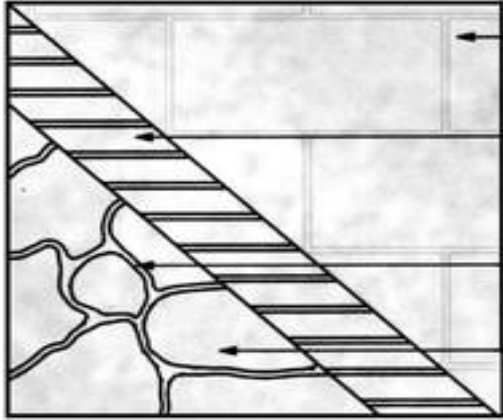


- ← Clean Masonry Wall-Untreated  
Unpainted Masonry,  
Concrete, Stucco
- ← 1/2" Mortar applied  
directly to wall
- ← Mortar Joint
- ← Native Stone

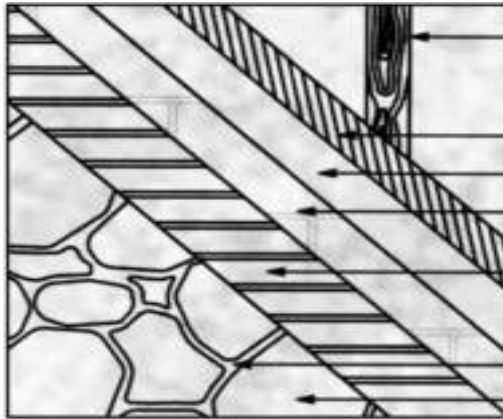

- ← Wood Frame  
2 x Wood or Metal Stud
- ← Sheathing
- ← Weather Resistant Barrier
- ← Galvanized Metal Lath
- ← 1/2" Mortar Scratch Coat
- ← Mortar Joint
- ← Native Stone

**Rigid Foam Installation**

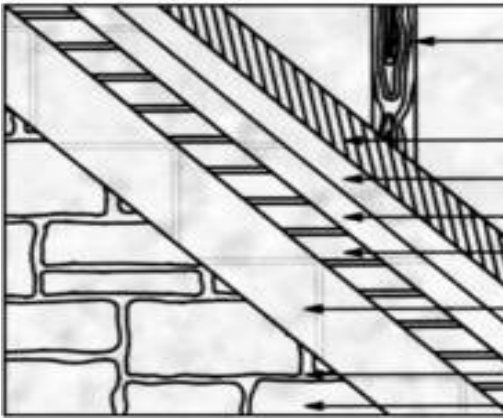

- ← 2 x Wood or Metal Stud
- ← Rigid Foam Insulation
- ← Weather Resistant Barrier
- ← Galvanized Metal Lath
- ← 1/2" Mortar Scratch Coat
- ← Mortar Setting Bed
- ← Mortar Joint
- ← Native Stone